

Stream & Videowall Managemeng VW 1.5 user manual for Android

INDEX

System Requirement	1
Google Play Download Link.....	1
Before APP Installation.....	1
Basic Operation.....	2
Home Screen.....	2
Add Clients	2
Add Hosts	5
Select Client Channel.....	8
Client Management	9
Set Client Info	9
Delete Client	11
TV Wall Management.....	12
Reboot Client.....	16
Set IP Mode	17
Auto Mode.....	17
DHCP Mode	17
Static IP.....	18
Set Factory Default	20
Launch Web.....	21
Indicator	22
Host Management	23
Preview Image	23
Set Host Info	24
Delete Host	26
Reboot Host.....	27
Set Host Channel.....	28
Set IP Mode	29
Auto Mode.....	29
DHCP Mode	29
Static IP.....	30
Set Factory Default	32
Launch Web.....	33
Indicator	34
Group Management.....	35
Create Group	35
Select Group Channel.....	37
Edit Group Info.....	39
Delete Group	41

Stream & Videowall Managemeng 1.5 user manual for Android

System Requirement

APP name: Stream & Videowall Management

Ver. 1.4.0



Android version 2.2 or later

Size: 1.5M

Google Play Download Link

Google Play Download QR code

Before APP Installation

You have to connect Host / Client / Ethernet Switch / Access Point (Wi-Fi router) together.

Connects your mobile phone by Wi-Fi and set the IP address same with the Host / Client.

System default IP setting is Auto IP, it will assign 169.254.X.X (subnet mask 255.255.0.0) to hosts and clients, you could also set to DHCP or Static IP, please refer to user manual web setting chapter: IP Setup.

How to get the IP address of receiver:

1. Connect monitor with receiver, **local IP** shows on right bottom screen when receiver booting or transmitter not connected(or no video input)
2. Press remote control button **MENU, 1, ENTER** (Network Information), it will shows the receiver IP Address on screen

How to get the IP address of transmitter:

1. Connect monitor with receiver, connect receiver with transmitter and set in the same channel, **remote IP** shows on right bottom screen when receiver booting or no video input from transmitter

Set IP address of transmitter/receiver by command:

Press and hold panel button "+" then power on to set factory default then enter engineering mode. In engineering mode Power and Link LED will be flash together, IP address of unit will be set to Static IP 192.168.0.88 temporarily, login to the web page by browser and change IP settings in API commands column as below(**x** can be one of numbers **1~254**):

```
astparam s ip_mode static
astparam s ipaddr 169.254.x.x
astparam s netmask 255.255.0.0
astparam save
```

Commands can be applied one by one, or connected them by "," to apply at once as below:

 
```
astparam s ip_mode static;astparam s ipaddr 169.254.x.x;astparam s netmask 255.255.0.0;astparam save
```

Also you could use private IP address/subnet mask you preferred like **192.168.x.x/255.255.255.0**

Stream & Videowall Managemeng 1.5 user manual for Android

Basic Operation

Home Screen

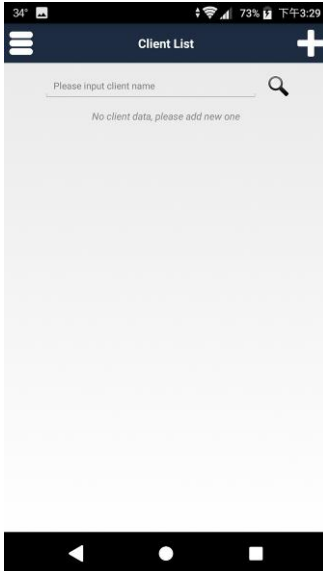


It will show Client List page when enter the APP
Touch top right 「+」 to enter Add Client page

Add Clients




 After touch 「+」 it will start search client

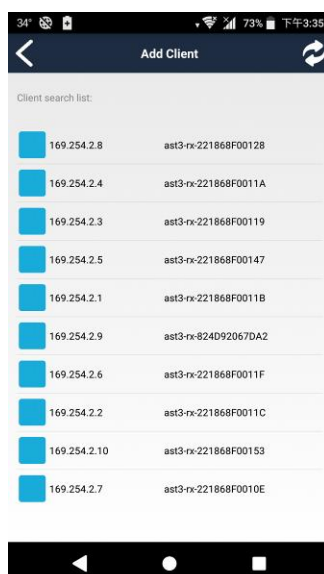


It will show all clients with pure blue icon in the list
Touch IP address to enter client information

 Stream & Videowall Managemeng 1.5 user manual for Android

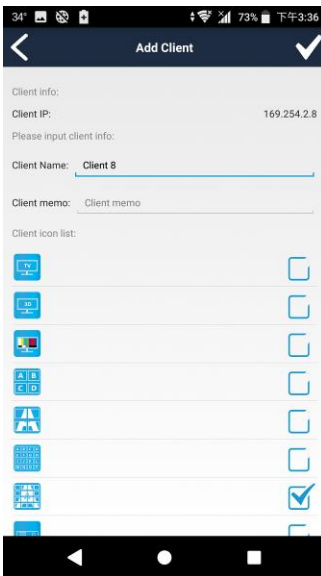


Enter the client name and memo, select the icon you prefer
Touch top right 「✓」 button to finish setting.

 Notice: Client name must be unique and not duplicated

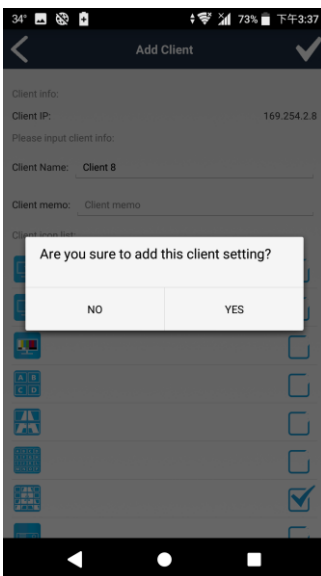


Touch 「Yes」 to confirm setting

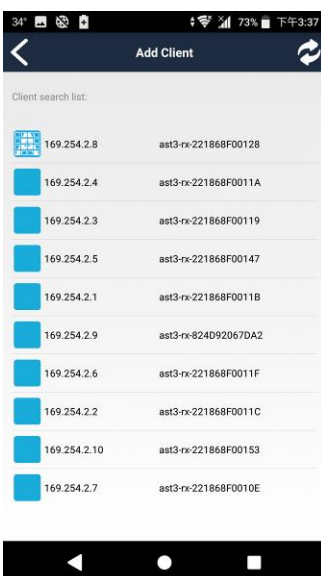 

Return to Add Client page you will see the icon you selected in front of the client which you just add.

 
Stream & Videowall Managemeng 1.5 user manual for Android

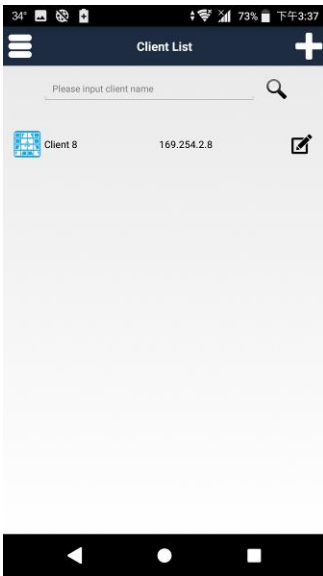


Return to Client List page you will see the client which you just add.

Stream & Videowall Managemeng 1.5 user manual for Android

 
Add Hosts

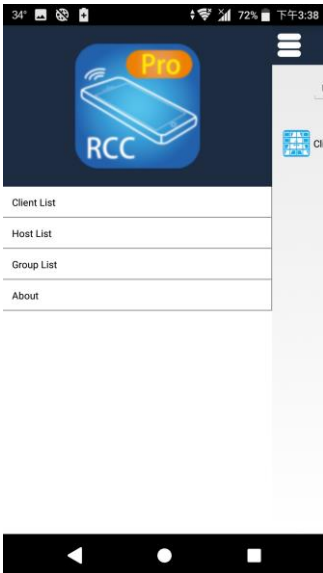

 Touch top left menu bar to show full menu

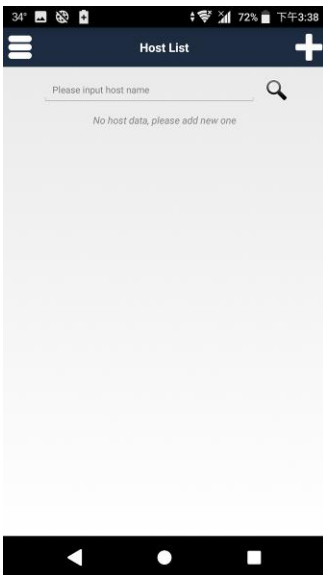

 Touch top right 「+」 to enter Add Host page

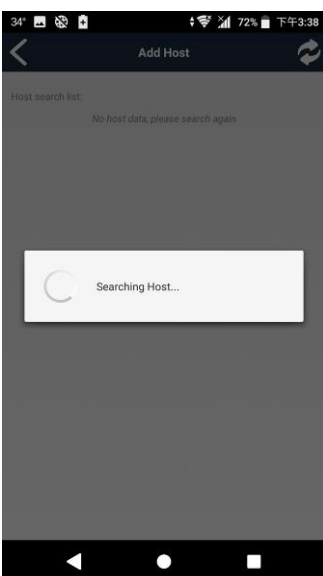


After touch 「+」 it will start search host


Stream & Videowall Managemeng 1.5 user manual for Android



 It will show all clients with pure blue icon in the list
Touch IP address to enter host information

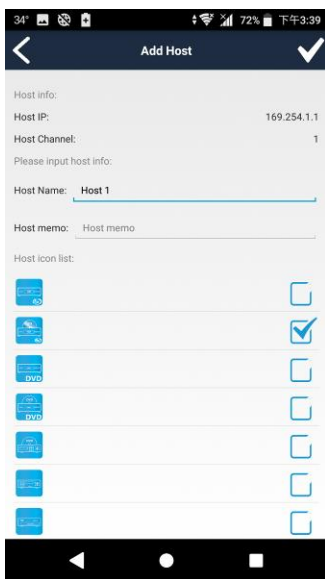


 Enter the host name and memo, select the icon you prefer
Touch top right 「✓」 button to finish setting.
Notice: Host name must be unique and not duplicated

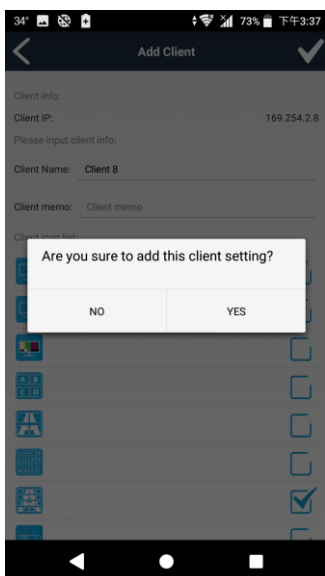


Touch 「Yes」 to confirm setting

 Stream & Videowall Managemeng 1.5 user manual for Android

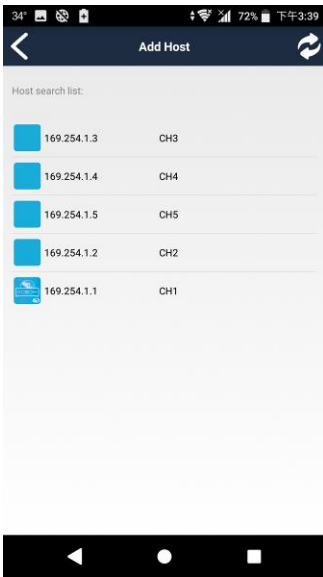

 
Return to Add Host page you will see the icon you selected in front of the client which you just add.

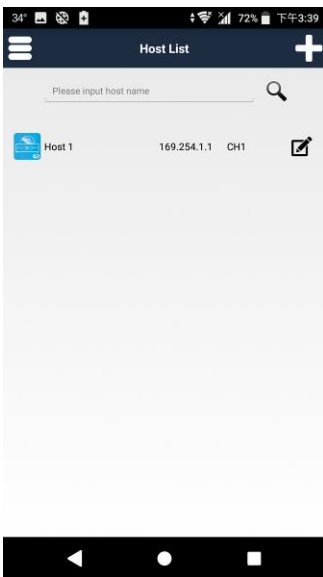

Return to Client List page you will see the client which you just add.

Stream & Videowall Managemeng 1.5 user manual for Android

 Select Client Channel

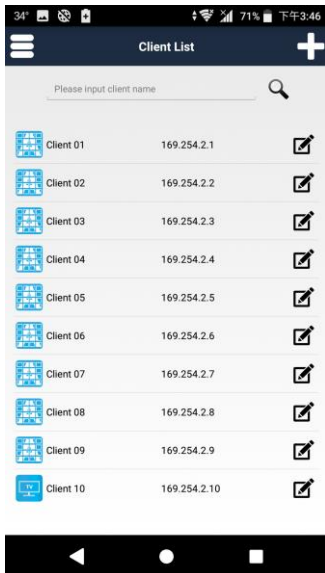


Left: Icon and name of clients


Center: IP address of clients

Right: client management

 Touch client column to enter Client Source page

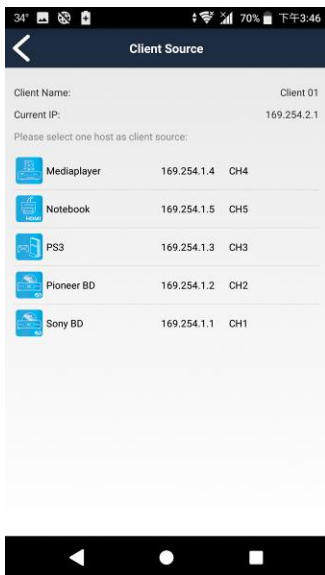

 In Client Source page it will list all register hosts for selection

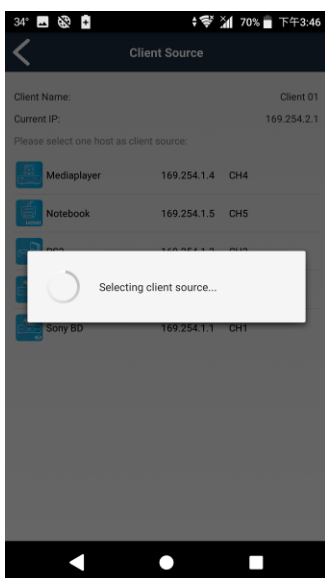


Touch the host icon to select

The selected channel will be switch immediately


Stream & Videowall Managemeng 1.5 user manual for Android

Client Management

 
Set Client Info

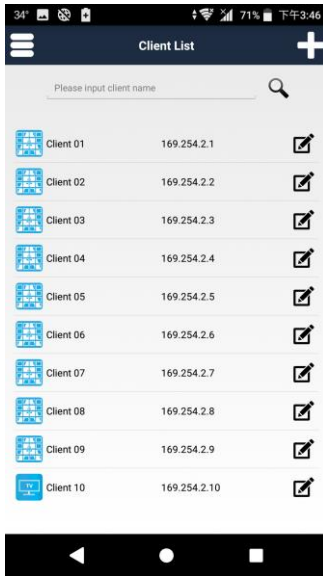

 Touch right pencil icon in client list to enter Client Management page

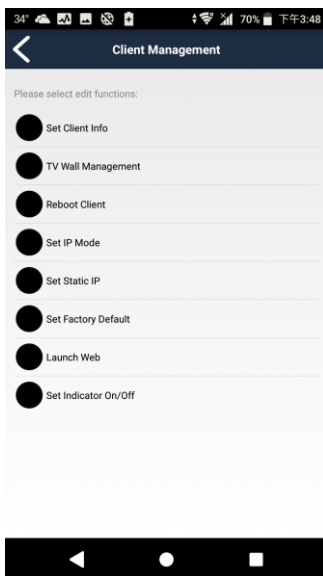


Touch Set Client Info

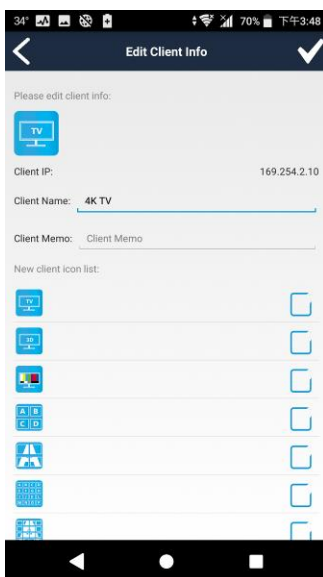 


You can change client name, memo and icon
Touch top right 「✓」 button to finish setting

 Stream & Videowall Managemeng 1.5 user manual for Android

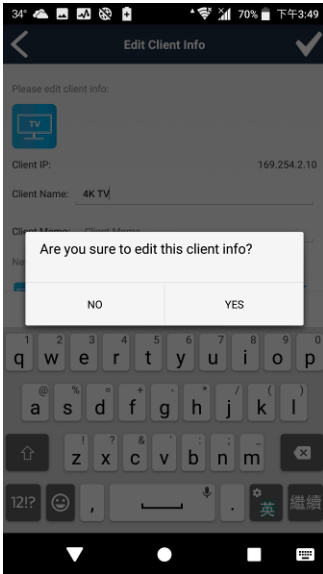


Touch 「Yes」 to confirm setting

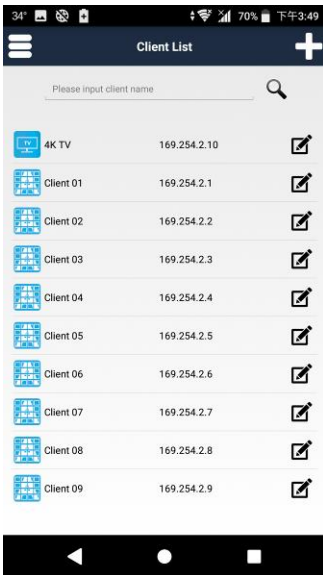 


Return to Client List the client name or icon have been changed

Stream & Videowall Managemeng 1.5 user manual for Android

 Delete Client

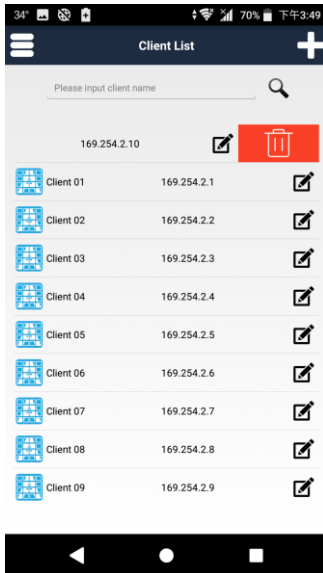

 
Drag client name to left to trash can icon

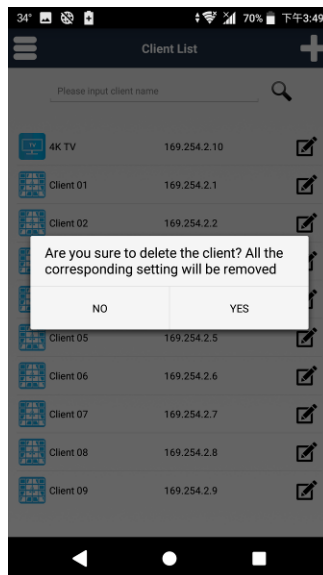

Touch 「Yes」 to confirm
All the corresponding setting will be removed

Stream & Videowall Managemeng 1.5 user manual for Android

 
TV Wall Management

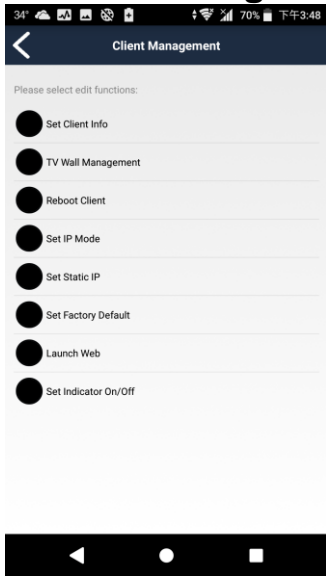

Touch TV Wall Management to enter Edit Client TV Wall page




 You could select default layout as 1*1(single), 2*2, 3*3, 4*4 in below then touch 「>」 icon

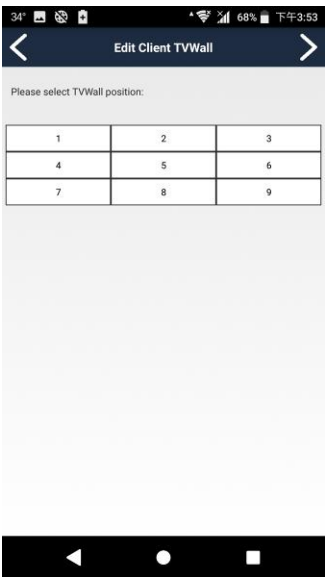


It will show the TV wall layout you select

 Stream & Videowall Managemeng 1.5 user manual for Android

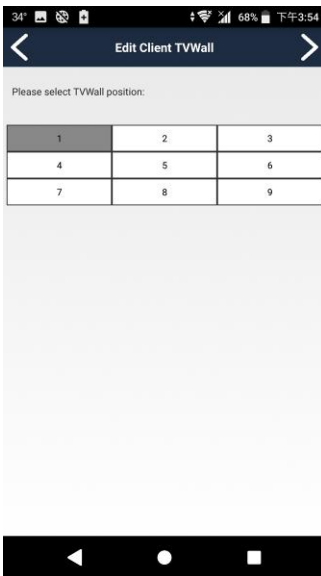

 Choice position of this monitor of RX in TV wall then touch 「>」 icon

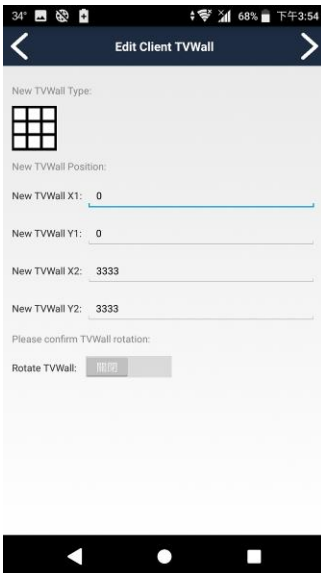

It will show detail coordinate and size of TV wall, you could adjust the number if you want to shift the position.

After setting please touch 「>」 icon



Touch 「Yes」 to confirm setting

You will see the monitor have been changed to TV wall mode

Stream & Videowall Managemeng 1.5 user manual for Android



Or you could set columns and row manually, maximum 8 rows 16 columns



Choice position of this monitor of RX in TV wall then touch 「>」 icon



It will show detail coordinate and size of TV wall, you could adjust the number if you want to shift the position, rotate the screen.

After setting please touch > icon

Stream & Videowall Managemeng 1.5 user manual for Android

 


Touch 「Yes」 to confirm setting


You will see the monitor have been changed to TV wall mode

Stream & Videowall Managemeng 1.5 user manual for Android

Reboot Client

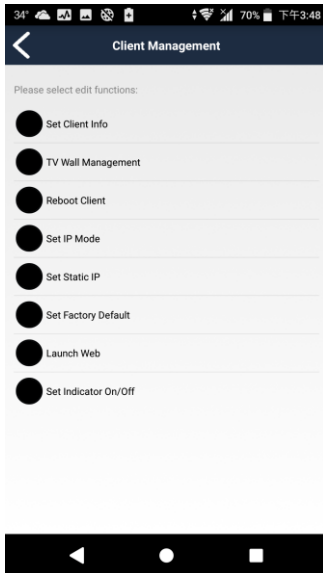

 
Touch Reboot Client to enter Reboot Client page

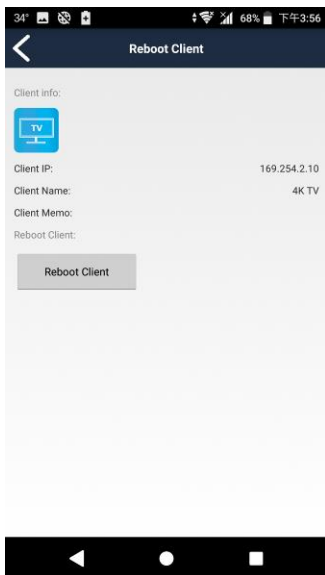

Touch 「Reboot Client」 to confirm setting

Stream & Videowall Managemeng 1.5 user manual for Android

 Set IP Mode

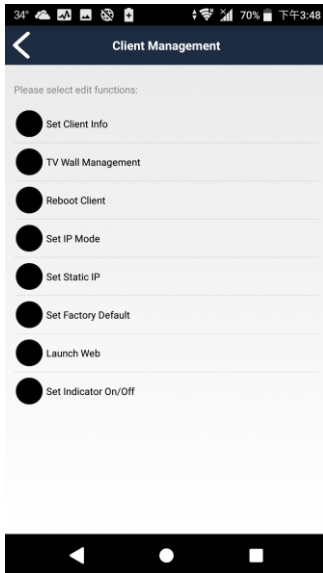

Touch Set IP Mode to enter Set IP Mode page

 
Auto Mode

IP assigned by client itself as 169.254.x.x, it will be changed automatically if duplicate IP detected.

DHCP Mode


IP address assigned by DHCP server

Notice: If there is no DHCP server exist the client will not able to work, you have to reboot the client to renew IP address once the DHCP server available, or set the client to factory default by MENU function 333 to switch to Auto Mode

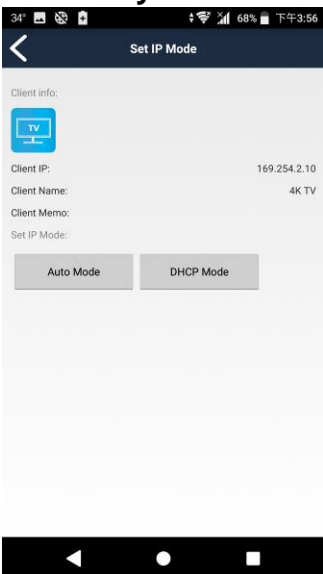


Touch 「Auto Mode」 or 「DHCP Mode」 to set IP mode

 Stream & Videowall Managemeng 1.5 user manual for Android

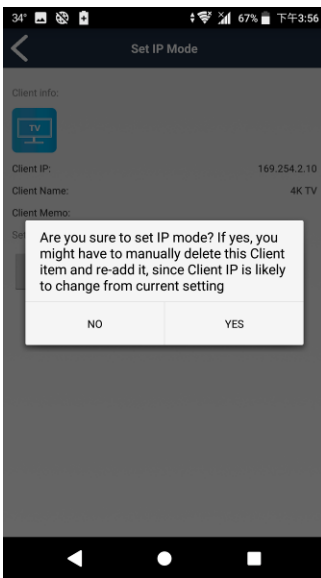


Touch 「Yes」 to confirm setting
Client will be reboot automatically

 Static IP

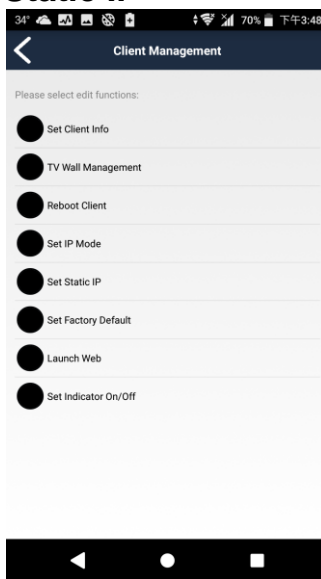

 Touch Set Static IP to enter Set Static IP page

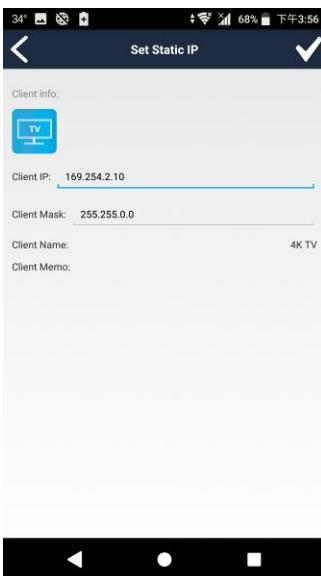

Enter IP address and subnet mask then touch top right 「✓」 button to finish setting
Client will be reboot automatically

Stream & Videowall Managemeng 1.5 user manual for Android

34" 67% 下午3:57

Set Static IP

Client info:

TV

Client IP: 169.254.2.10

Client Mask: 255.255.0.0

Client Name: 4K TV

 
Client Memo:

Client IP already exists, please try another one


**Notice: IP address must be unique and not duplicated
It will show warring message if IP address already exist**

Stream & Videowall Managemeng 1.5 user manual for Android


Set Factory Default

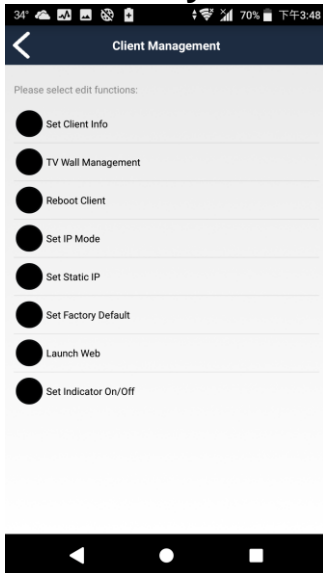

 Touch Set Factory Default to enter Set Factory Default page

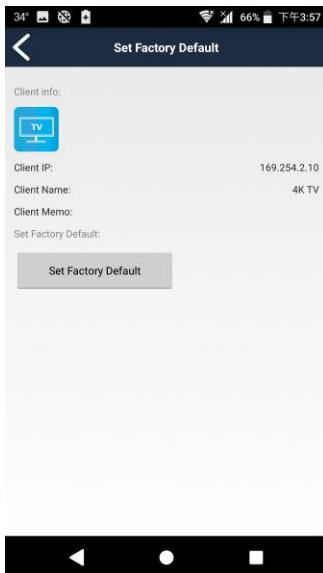


Touch Set Factory Default

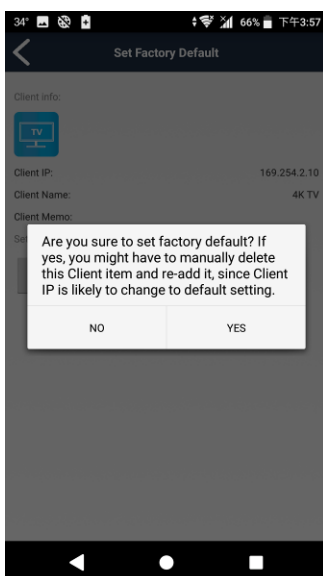 


Touch 「YES」 to confirm
Client will be reboot automatically

Stream & Videowall Managemeng 1.5 user manual for Android

 Launch Web

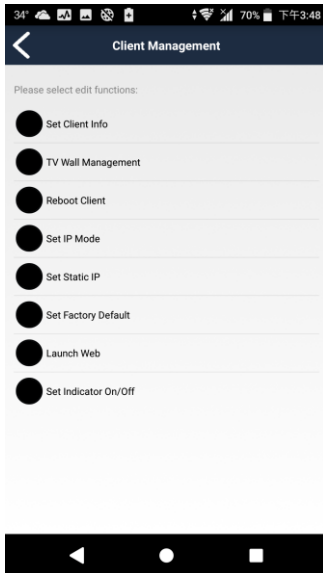


Touch Launch Web

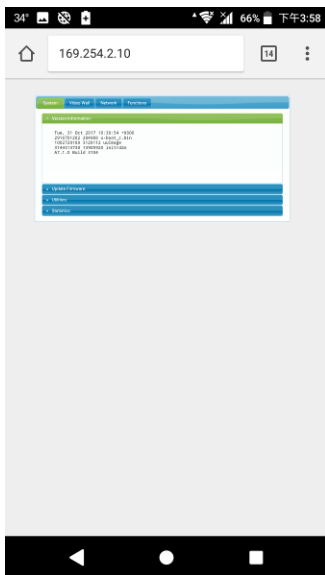 

It will open browser and login to the web of client
For detail settings please refer user manual

Stream & Videowall Managemeng 1.5 user manual for Android

 Indicator

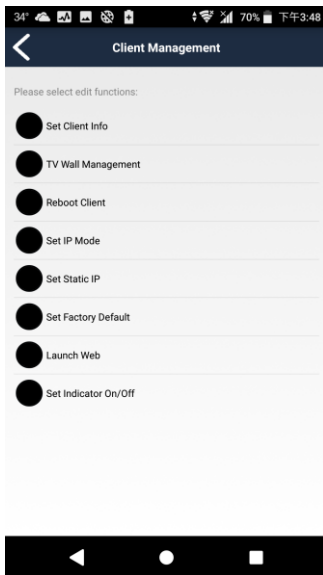

Touch Set Indicator On/Off to enter setting page

 


Touch Indicator On, the power LED of host will keep flashing and show OSD message "I am here" on monitor


Touch Indicator Off to stop indicating

Stream & Videowall Managemeng 1.5 user manual for Android

Host Management

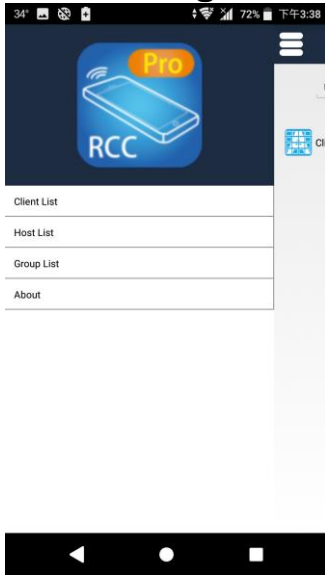

 
Touch top left menu bar to show full menu

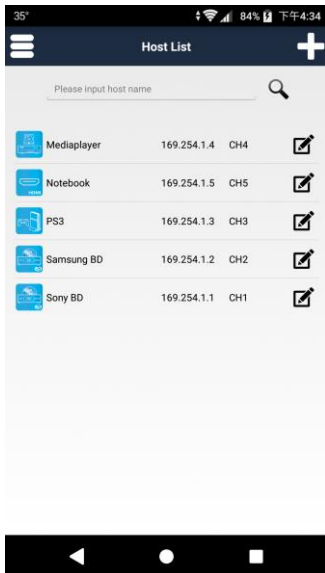

It will show status of registered hosts while enter the page:

IP address: default is 169.254.xxx.xxx, subnet mask 255.255.0.0
Channel number: 0~999

 
Preview Image

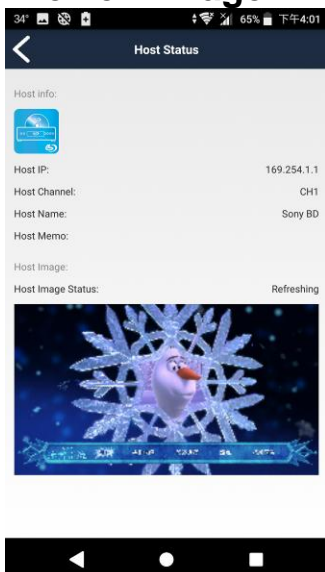


Touch host to preview image of source to make sure the content is correct before switch to, the image will refreshing automatically

Stream & Videowall Managemeng 1.5 user manual for Android

 
Set Host Info

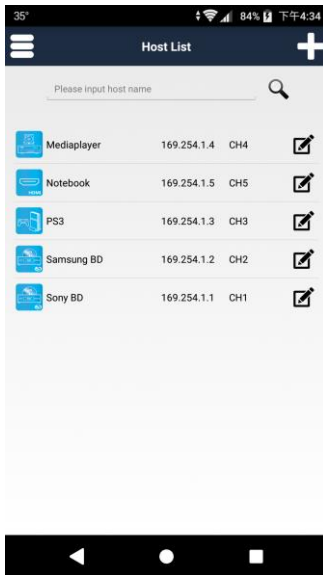

 Touch right pencil icon in client list to enter Host Management page

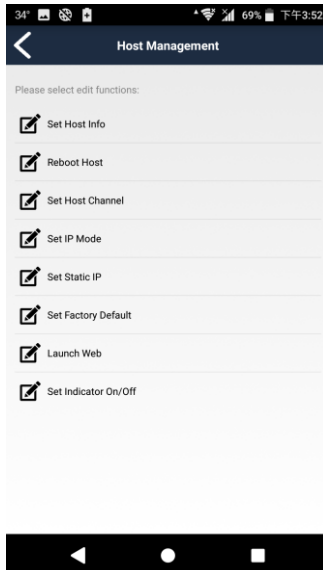


Touch Set Host Info

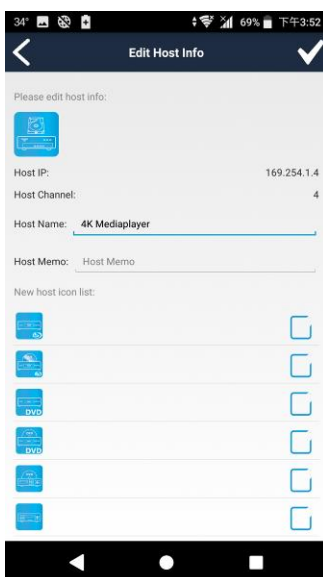 


You can change host name, memo and icon
Touch top right 「✓」 button to finish setting

 Stream & Videowall Managemeng 1.5 user manual for Android

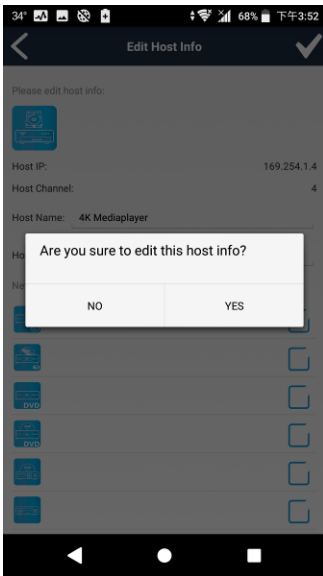


Touch 「Yes」 to confirm setting

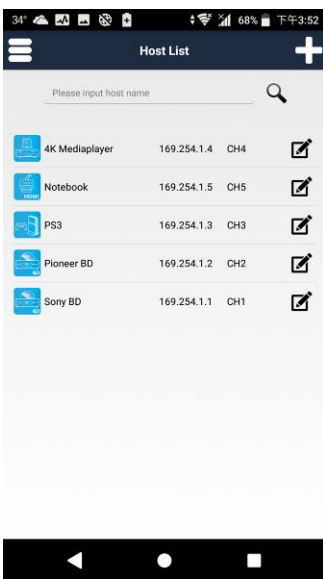 


Return to Host List the host name or icon have been changed

Stream & Videowall Managemeng 1.5 user manual for Android

 Delete Host

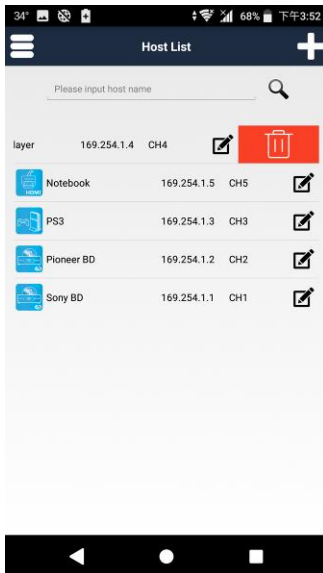

 Drag client name to left to trash can icon

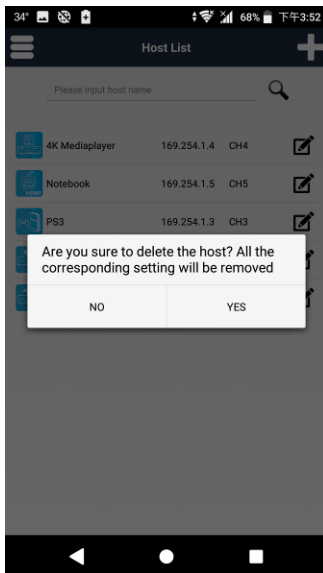


Touch 「Yes」 to confirm


All the corresponding setting will be removed

Stream & Videowall Managemeng 1.5 user manual for Android

 Reboot Host

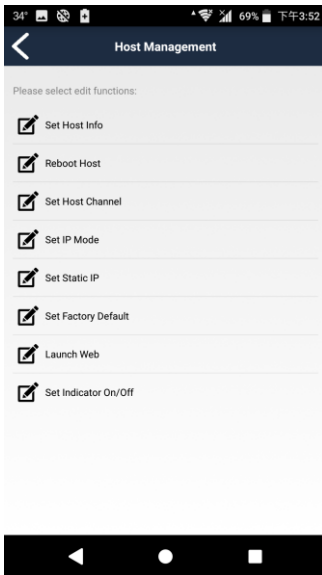

 
Touch Reboot Host to enter Reboot Host page

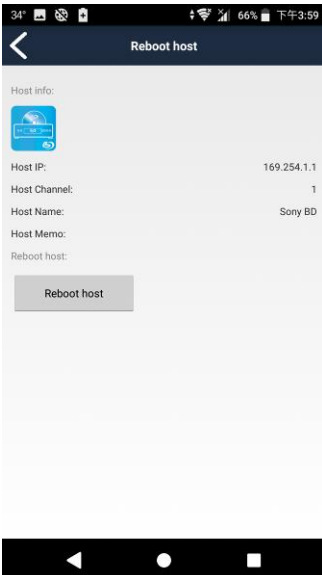

Touch 「Reboot Host」 to confirm setting

Stream & Videowall Managemeng 1.5 user manual for Android

 
Set Host Channel

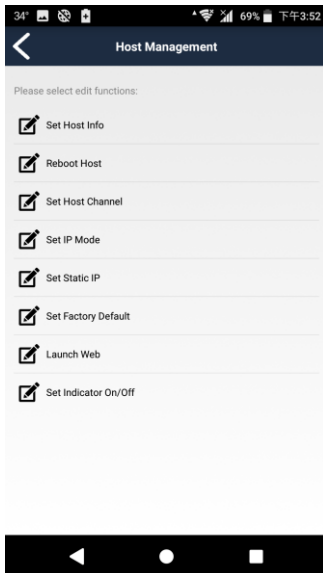

Touch Set Host Channel enter setting page



 
Enter channel number (0~999) then touch top right 「✓」 button to finish setting

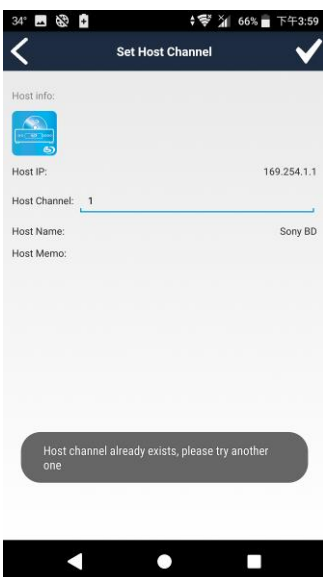

**Notice: Channel number must be unique and not duplicated
It will show warring message if channel number already exist**

Stream & Videowall Managemeng 1.5 user manual for Android

 Set IP Mode

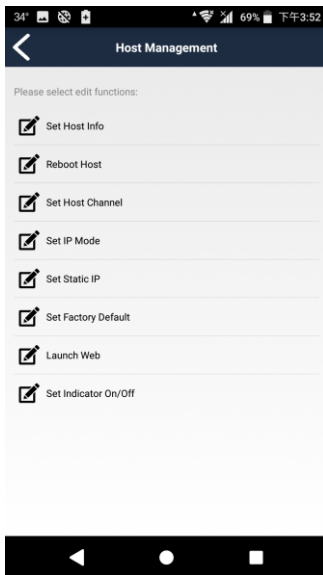

Touch Set IP Mode to enter Set IP Mode page

 
Auto Mode

IP assigned by client itself as 169.254.x.x, it will be changed automatically if duplicate IP detected.

DHCP Mode


IP address assigned by DHCP server

Notice: If there is no DHCP server exist the host will not able to work, you have to reboot the client to renew IP address once the DHCP server available, or set the host to factory default by MENU function 333 to switch to Auto Mode

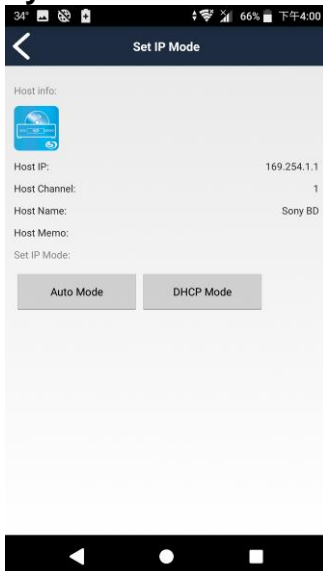


Touch 「Auto Mode」 or 「DHCP Mode」 to set IP mode

 Stream & Videowall Managemeng 1.5 user manual for Android

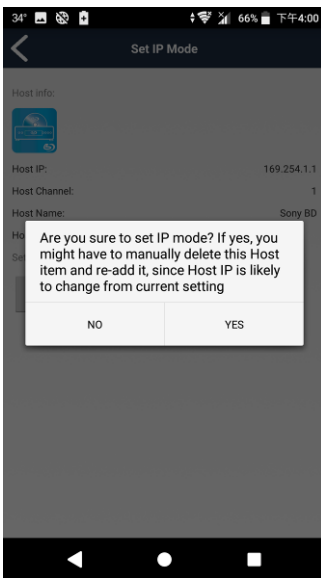


Touch 「Yes」 to confirm setting
Host will be reboot automatically

 Static IP

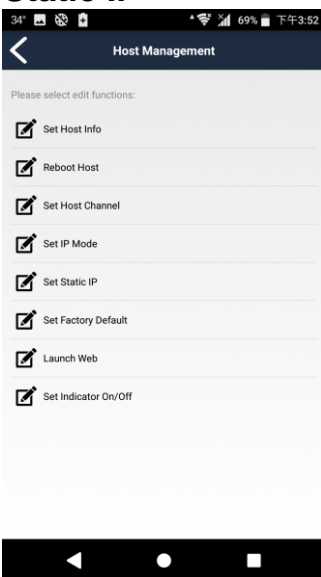

 Touch Set Static IP to enter Set Static IP page

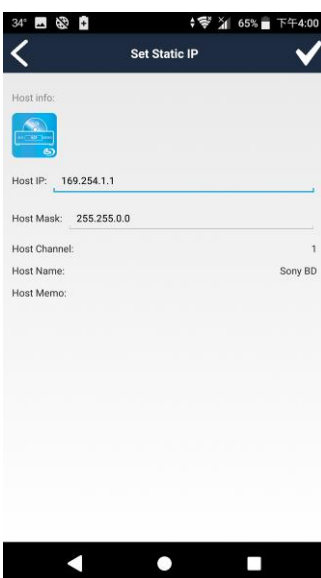

Enter IP address and subnet mask then touch top right 「✓」 button to finish setting
Host will be reboot automatically


Stream & Videowall Managemeng 1.5 user manual for Android



34° 65% 下午4:00

< Set Static IP ✓

Host info:



Host IP: 169.254.1.1

Host Mask: 255.255.0.0

Host Channel: 1

Host Name: Sony BD

 
Host Memo:

Host IP already exists, please try another one


**Notice: IP address must be unique and not duplicated
It will show warring message if IP address already exist**

Stream & Videowall Managemeng 1.5 user manual for Android


Set Factory Default

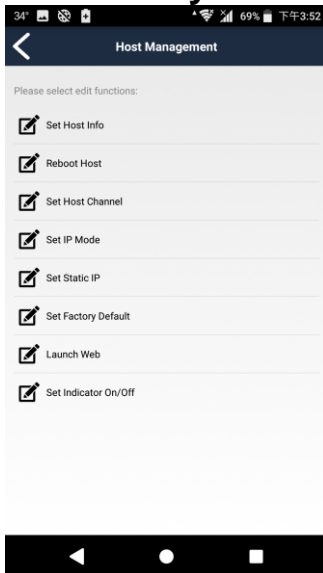

 Touch Set Factory Default to enter setting page

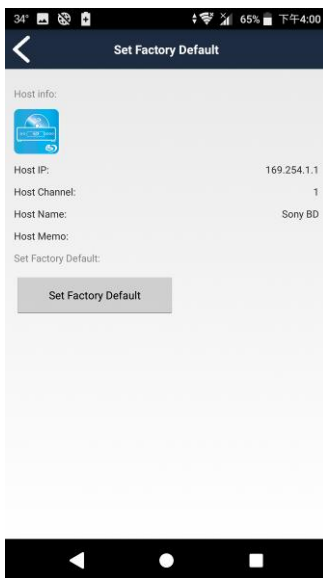


Touch Set Factory Default

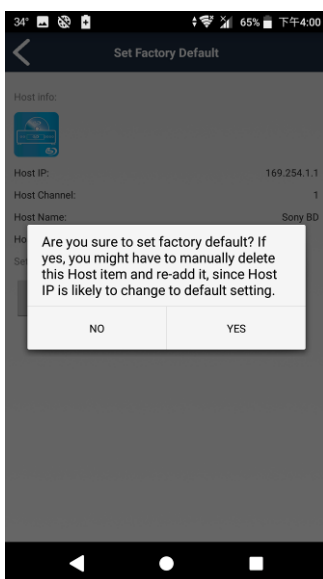 


Touch 「YES」 to confirm
Host will be reboot automatically

Stream & Videowall Managemeng 1.5 user manual for Android

 Launch Web

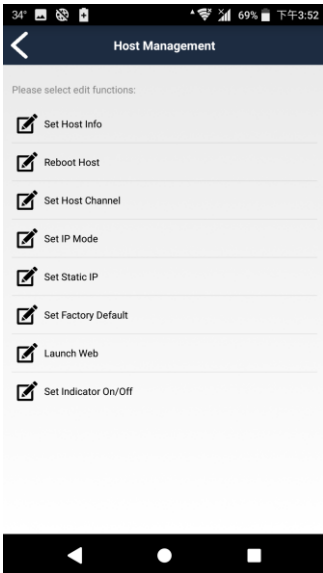


Touch Launch Web

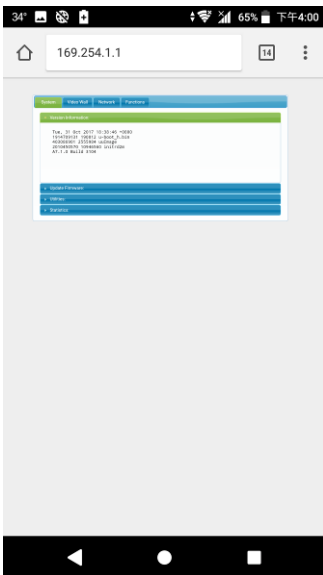 


It will open browser and login to the web of host
For detail settings please refer user manual

Stream & Videowall Managemeng 1.5 user manual for Android

 Indicator

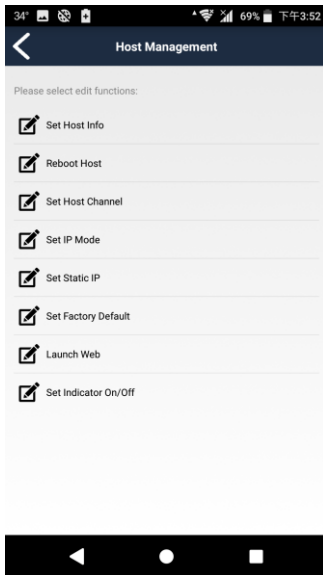

 Touch Set Indicator On/Off to enter setting page

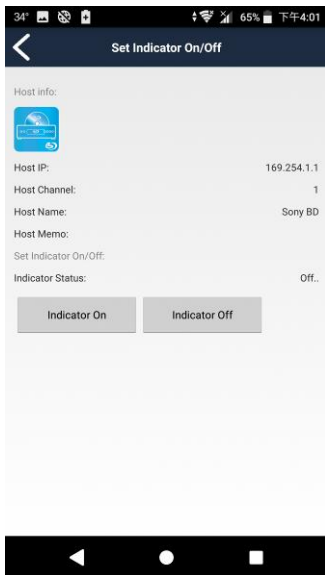


Touch Indicator On, the power LED of host will keep flashing

Touch Indicator Off to stop indicating

Stream & Videowall Managemeng 1.5 user manual for Android


Group Management

 Create Group

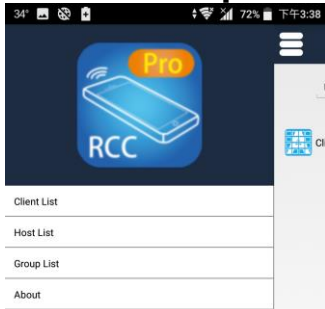


Touch top left menu bar to show full menu

 Touch bottom right 「Edit」 at Client page to enable select function

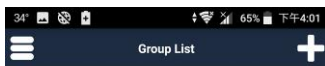


 Touch top right 「+」 to enter Add Host page

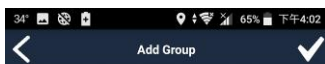


Touch top right 「+」 to enter Add Host page

 Stream & Videowall Managemeng 1.5 user manual for Android

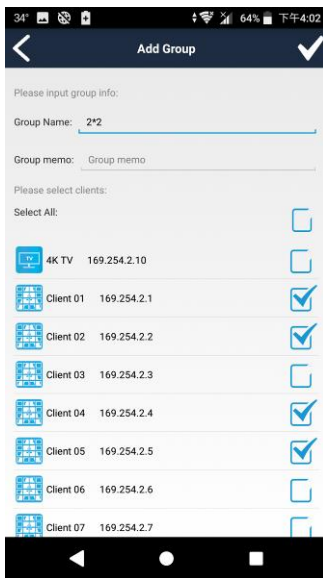


Enter the group name and memo, select the client you prefer
Touch top right 「✓」 button to finish setting.

 Notice: Group name must be unique and not duplicated

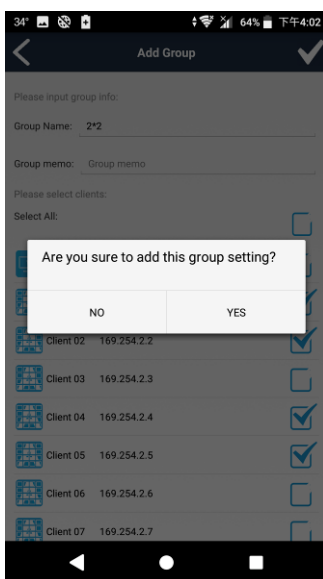

Touch 「Yes」 to confirm setting

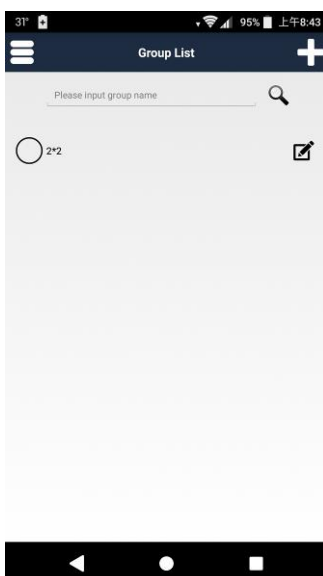 


Return to Group List page you will see the group which you just add.

Stream & Videowall Managemeng 1.5 user manual for Android


Select Group Channel



 Touch group column to enter Group Source page

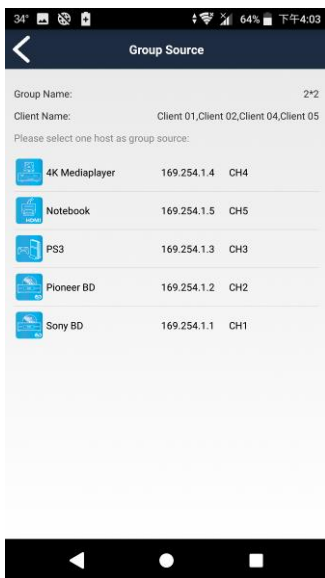

 In Group Source page it will list all register hosts for selection

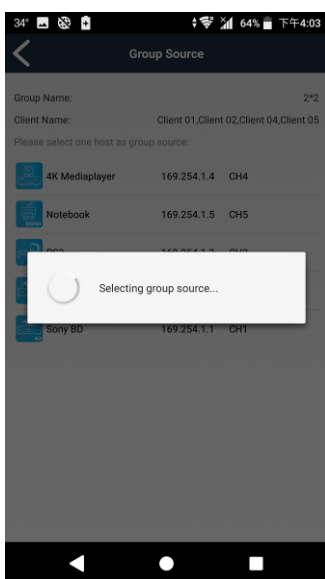


Touch the host icon to select
The selected channel will be switch immediately

Stream & Videowall Managemeng 1.5 user manual for Android



Yellow area shows the devices of group

 Gray area shows the available channels

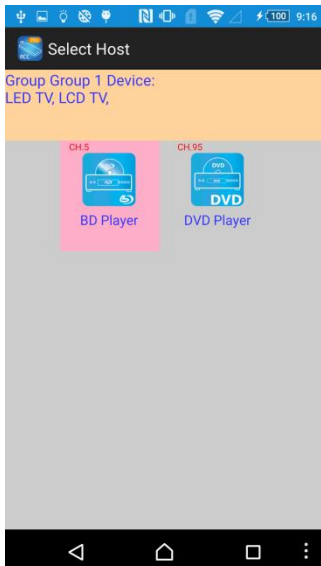


Touch the host icon to select


The selected channel will be high light and switch the screen immediately

Stream & Videowall Managemeng 1.5 user manual for Android

 
Edit Group Info

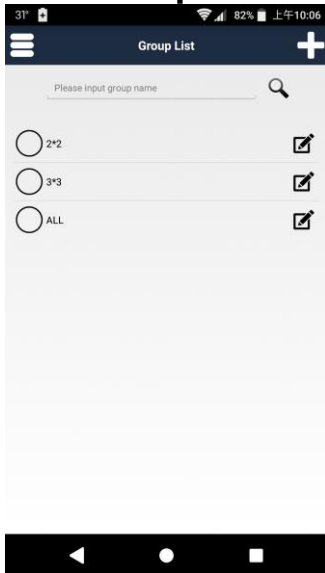

 Touch right pencil icon in group list to enter Edit Group Info page

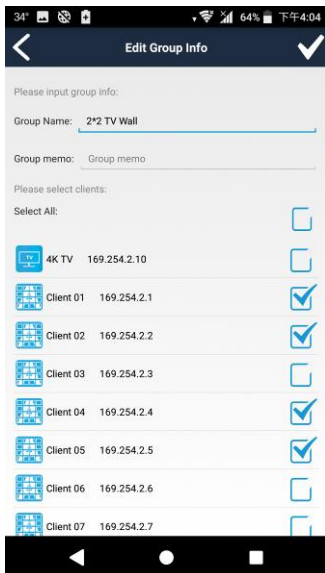

 You can change group name, memo and add/remove client
Touch top right 「✓」 button to finish setting

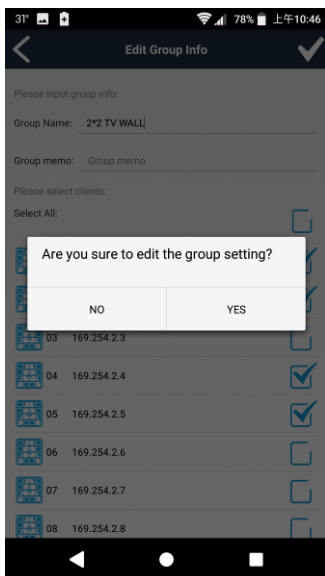

Touch 「Yes」 to confirm setting

 
Stream & Videowall Managemeng 1.5 user manual for Android




Return to Group List the group name have been changed

Stream & Videowall Managemeng 1.5 user manual for Android

Delete Group

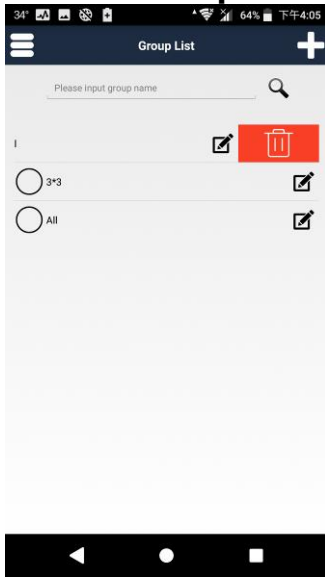

 Drag client name to left to trash can icon

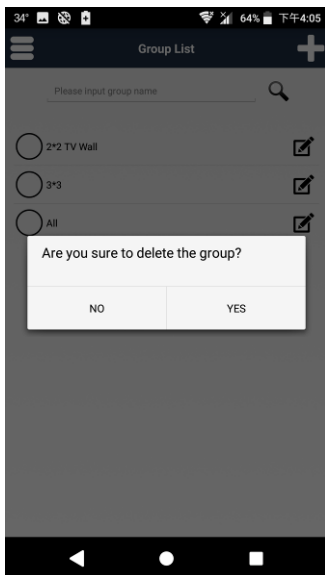

Touch 「Yes」 to confirm and the group will be removed